

INSTALLATION INSTRUCTIONS

POLLYTEE® Service Connectors



PT



Service connections to corrugated, profile and solid wall pipe.

SERVICE CONNECTORS

1

Drill hole using appropriate core bit. Ensure hole is cut 90° to the pipe axis.

NUT & BOLT CLAMP



RUBBER GASKET




2

Lightly file pipe edges to clear away debris around the opening.




3

Remove clamp. Fold gasket in half and place into opening.

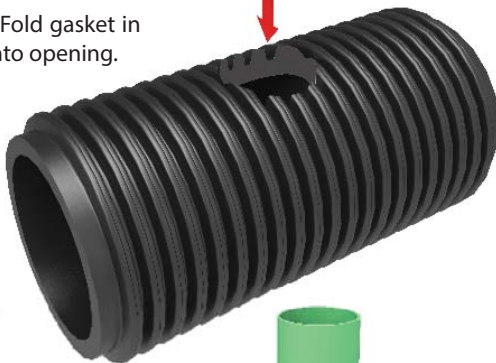

4

Pull gasket upwards until all edges of bottom flange are secure against inside pipe wall. Replace clamp.

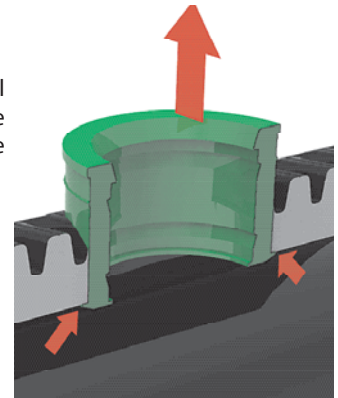

5

Mark incoming lateral pipe, according to insertion depth. Lubricate lateral pipe & gasket.



6

Push/press lateral pipe downward until it butts up against internal pipe stop. Tighten clamp to 60 in/lbs.



Mission Rubber Company LLC | 1660 Leeson Lane | Corona, CA 92879 USA
toll free | 800.854.9991 fax | 800.637.4601

missionrubber.com

REV. 5/15



MISSION
RUBBER COMPANY

connected, for good™